

Required Tools: (Not included)


- 3 mm Allen wrench
- Phillips screwdriver
- Flat screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove ten (10) screws from the bottom of the deck.

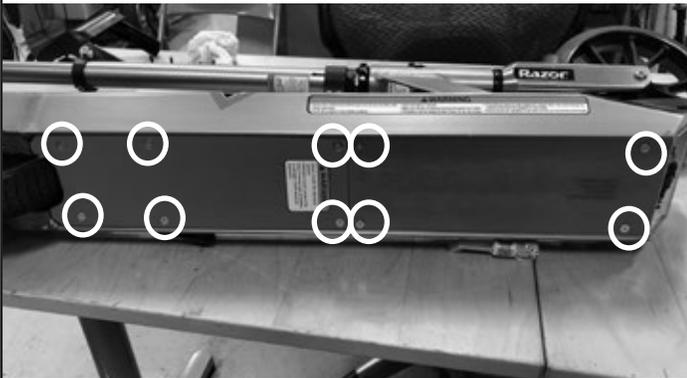**Step 2**

Using a Phillips screwdriver, remove two (2) screws from the front cover.




Step 3

Remove the plastic cover from the unit. Locate and disconnect the throttle and power switch wires from the controller.




Step 4

Remove the grommet from the metal bracket. Use a flat screwdriver, if needed. Push the throttle and power switch wires inside the opening.

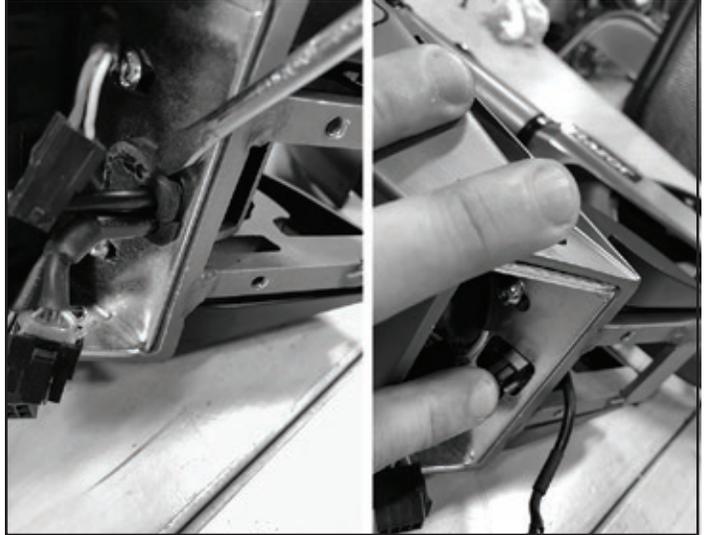

Step 5

Using a 3 mm Allen wrench, remove four (4) hex screws and pull the bracket out of the frame.

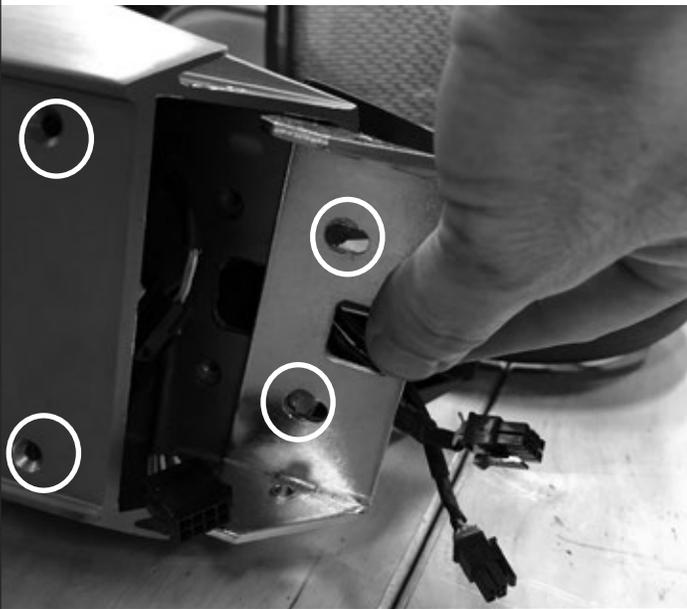

Step 6

Remove the controller cover to have access to the wires.



Step 7

Disconnect all the connectors from the controller.



Step 8

Slide the battery and controller tray out from the unit.
Replace the controller.



Step 9

To install the new controller, reverse steps 1-8.

ATTENTION: Charge battery 6 hours before using.