

Required Tools: (Not included)


- Phillips screwdriver
- 10 mm wrench
- Wire cutters
- 3 mm Allen wrench
- Small flat screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, loosen and remove seven (7) screws from the battery cover on the side with the charger port.

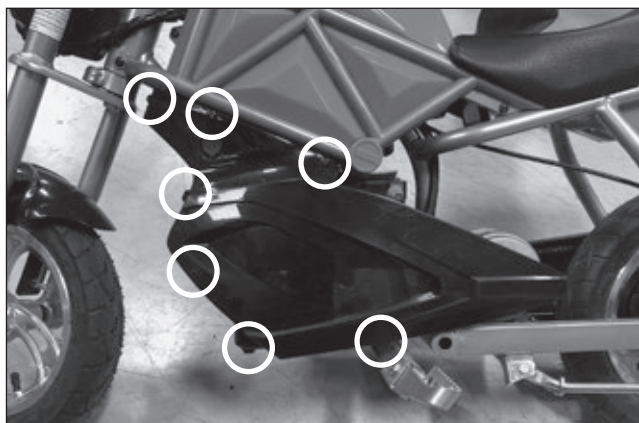**Step 2**

Using a 10 mm wrench, loosen and remove the two (2) lock nuts under the seat. Lift and remove the seat from the frame and set aside.



Step 3

Using a Phillips screwdriver, remove the two (2) screws below the warning label. Pull up on the plastic piece. Remove it and set aside.




Step 4

Lift the cover from the storage compartment and remove two (2) self-tapping screws.



Step 5

Using a Phillips screwdriver, remove three (3) self-tapping screws at the front of the "gas" tank and two (2) regular screws from the steering tube. The second regular screw is located on the opposite side of the unit, not shown.

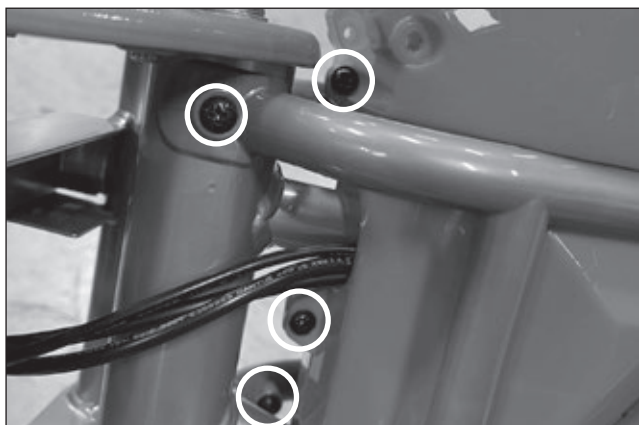


Step 6

Remove two (2) self-tapping screws from the bottom of the "gas" tank and one (1) regular screw from the main frame.




Step 7

Locate and disconnect the throttle from the controller. Using wire cutters, cut the zip ties that hold the cables in place.

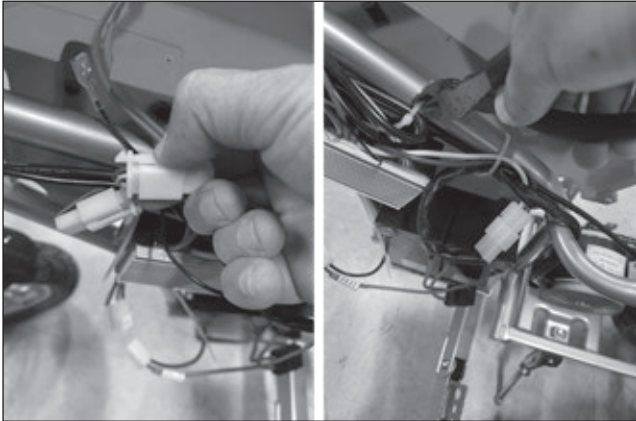

Step 8

Using a 3 mm Allen wrench, loosen the set screw from the throttle. Move the throttle away from the grip.

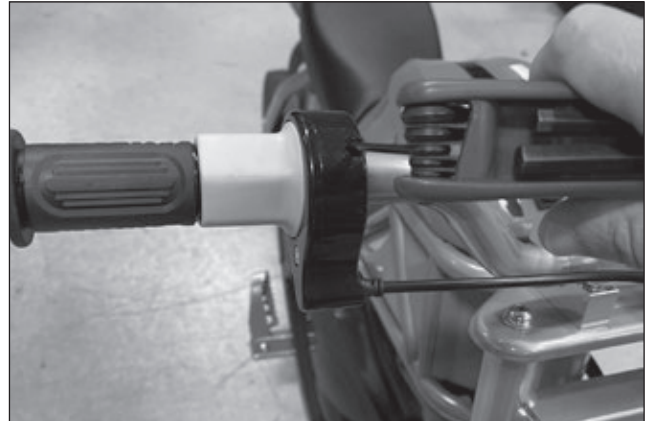

Step 9

Insert the blade of a small flat screwdriver in between the grip and the handlebar. Using soapy water or lubricant, apply some drops in between the handle and the grip and remove the grip and the throttle.



Step 10

Reverse the steps for installation.

ATTENTION: Charge battery 12 hours before using.