

### Required Tools: (Not included)


- A. 4 mm Allen wrench
- B. 3 mm Allen wrench
- C. Small flat screwdriver
- D. Phillips screwdriver

### ▲ WARNING

**CAUTION:** To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

#### Step 1

Using a 4 mm Allen wrench, loosen and remove the four (4) bolts that secure the handlebar to the stem. Pull the handlebar out from the stem.

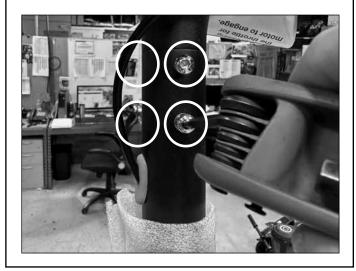


### Step 2

Locate and disconnect the handlebar connector from the main line.



#### Step 3

Using a 3 mm Allen wrench, loosen the set screws under the throttle and move it away from the grip.

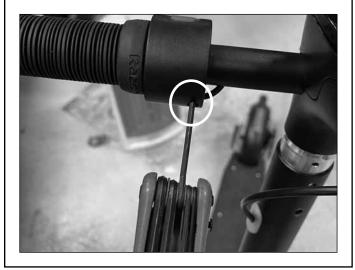

#### Step 5

With a small flat screwdriver, insert the blade below the cover of the power display. Use the screwdriver to carefully go around the power display and pop the cover off.



## Step 4

Using a small flat screwdriver, insert the blade between the grip and the handlebar. Apply a few drops of WD40® or soapy water and remove the screwdriver. Pull firmly on the grip to remove it from the handlebar.




#### Step 6

Using a Phillips screwdriver, remove the four (4) screws holding the PC board display. Carefully lift up the PC board display.




## Step 7

Locate and disconnect the throttle connector from the PC board display.

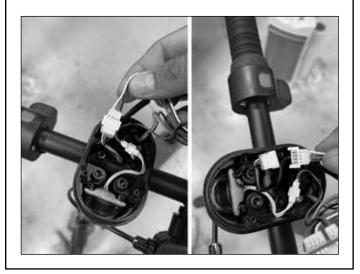

## Step 8

Remove the throttle connector from the handlebar tube and slide the throttle out from the handlebar.

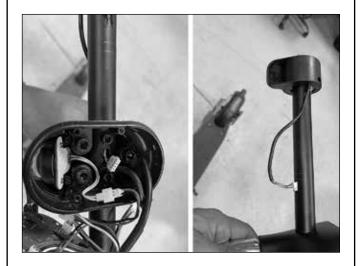

# Step 9

To install a new throttle, reverse steps 1-8.

ATTENTION: Charge battery 12 hours before using.