

Required Tools: (Not included)

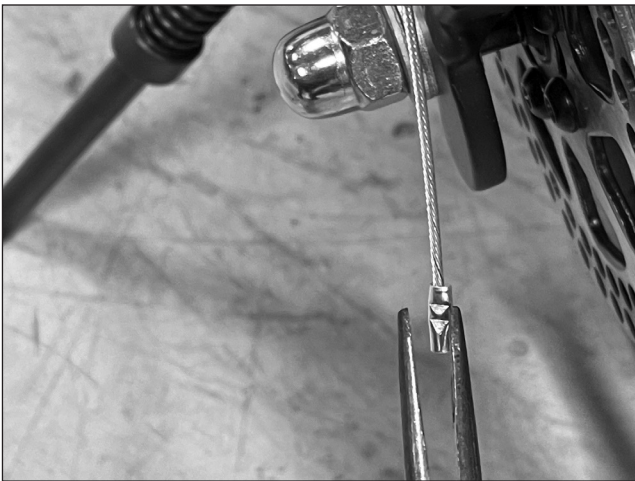
- A. Long needle pliers
- B. 5 mm Allen wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using long needle pliers, pinch the end cap from the brake cable. Remove the end cap and set aside.

**Step 2**

Using a 5 mm Allen wrench, loosen the bolt that holds the brake cable onto the brake caliper actuator arm. Slide the cable out.



Step 3

Loosen and remove the two (2) hex bolts that hold the brake caliper onto the frame and remove.



Step 4

Reverse the steps.

ATTENTION: Charge battery 8 hours before using.