



STAGE2 M1/STAGE2 M2
BRAKE LEVER BLADE REPLACEMENT
PART NUMBER:W15128945289

Required Tools: (Not included)


- 2mm Allen Wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Please refer to the diagram below for the labeled components of the brake lever blade assembly.

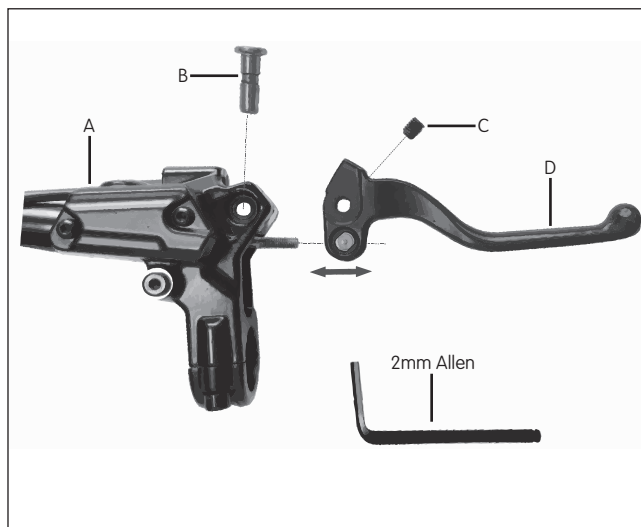


Step 2

Use a 2 mm Allen wrench to remove the part labeled C.

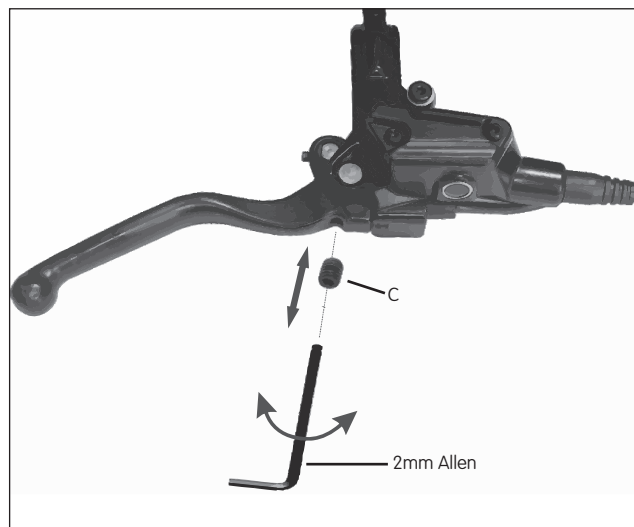


Step 3

Use a 2 mm Allen wrench to loosen part B, turning in the opposite direction of part A, as shown below.

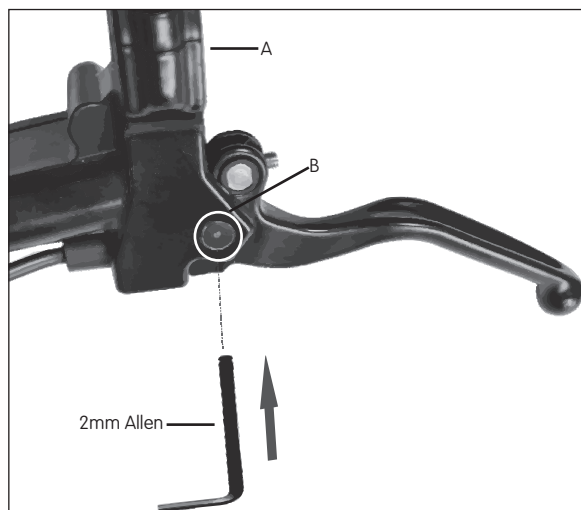


Step 4

Remove part B. Use a 2mm Allen wrench to loosen and remove part E.

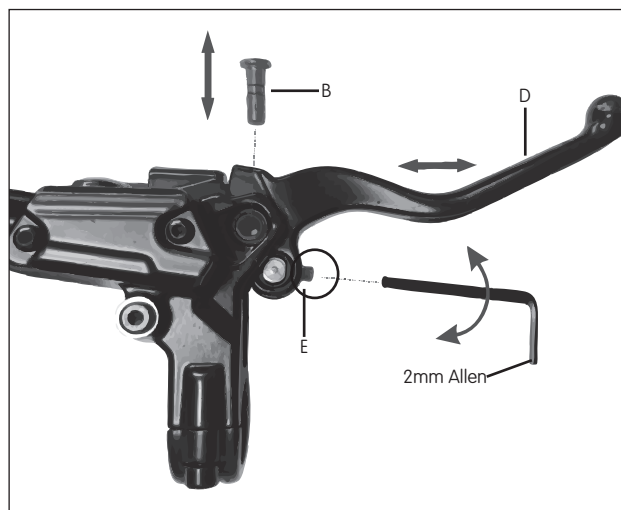


Step 5

To install a new brake lever blade, reverse steps 1 through 4.

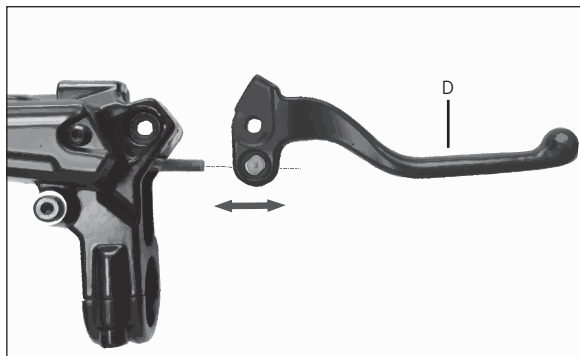

Note

If the new brake lever blade has too much slack or is too tight, use a 2 mm Allen wrench to adjust it. The distance of the movement should be between 15 mm and 20 mm.

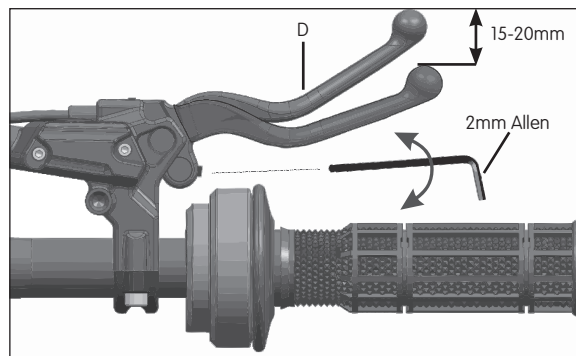

ATTENTION: Charge battery 12 hours before using.