

Required Tool: (Not included)


- 5 mm Allen wrench

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5 mm Allen wrench, remove the four (4) hex bolts that keep the seat attached to the frame. Remove the seat and set aside.

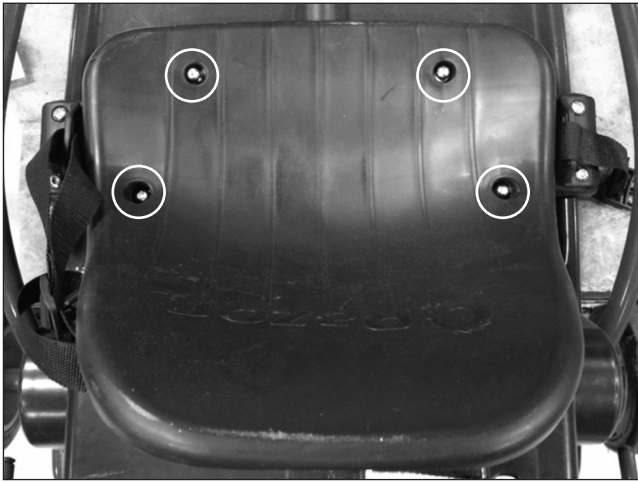
**Step 2**

Using a 5 mm Allen wrench, remove four (4) hex bolts from the battery cover, two (2) on each side. Remove the battery cover and set aside.

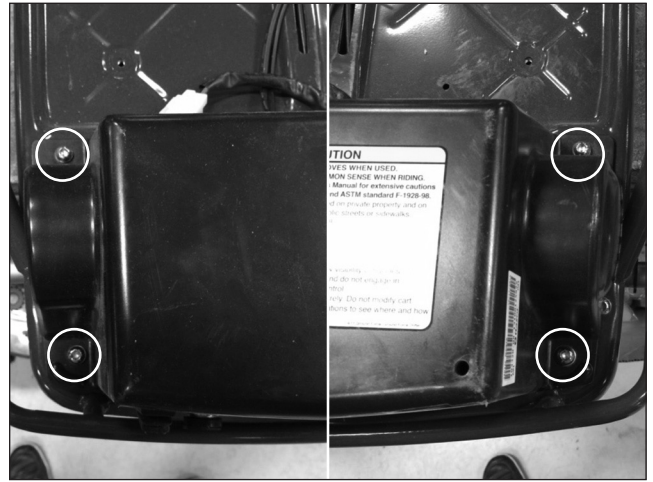


Step 3

Locate and disconnect the motor from the controller.

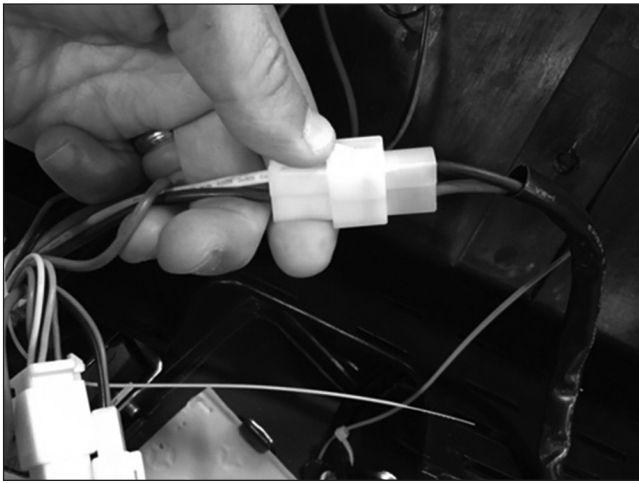

Step 4

Turn the unit over. Using a 5 mm Allen wrench, in a counterclockwise motion, remove the four (4) hex bolts that secure the motor to the frame.

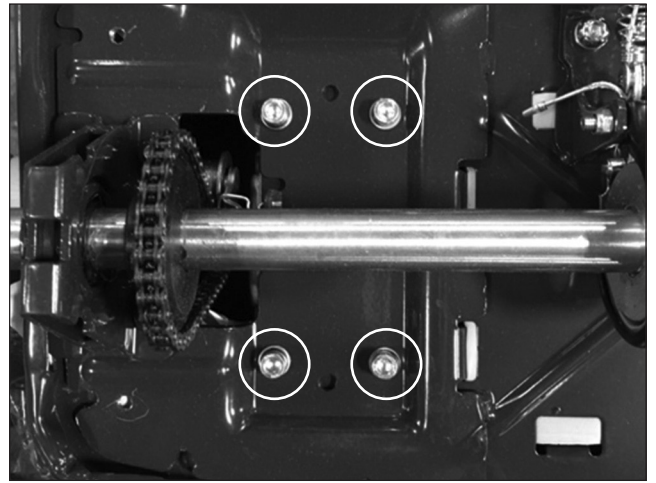

Step 5

Reverse the procedures to install the new motor.

- Attach the new motor to the frame.
- Attach the motor to the controller.
- Attach the battery cover.
- Attach the seat.

Attention: Charge battery 12 hours before using.