

Required Tools: (Not included)

- Phillips screwdriver
- 10 mm wrench
- Wire cutters
- 5 mm Allen wrench
- Small flat screwdriver
- Long needle pliers

A WARNING

A CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, loosen and remove seven (7) screws from the battery cover on the side with the charger port.



Step 2

Using a 10 mm wrench, loosen and remove the two (2) lock nuts under the seat. Lift and remove the seat from the frame and set aside.

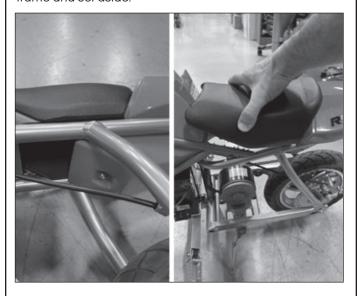

Step 3

Using a Phillips screwdriver, remove the two (2) screws below the warning label. Pull up on the plastic piece. Remove it and set aside.



Step 4

Lift the cover from the storage compartment and remove two (2) self-tapping screws.



Step 5

Using a Phillips screwdriver, remove three (3) self-tapping screws at the front of the "gas" tank and two (2) regular screws from the steering tube.




Step 6

Remove two (2) self-tapping screws from the bottom of the "gas" tank and one (1) regular screw from the main frame.



Step 7

Locate and disconnect the brake from the controller. Using wire cutters, cut the zip ties that hold the cables in place.

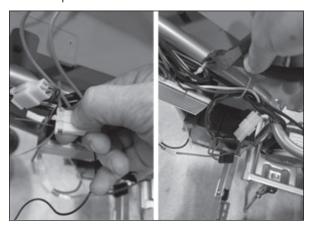

Step 8

Using a 5 mm Allen wrench, loosen the set screw from the brake lever. Move the lever away from the grip.




Step 9

Insert the blade of a small flat screwdriver in between the grip and the handlebar. Using soapy water or lubricant, apply some drops in between the handle and the grip and remove the grip and the brake lever.



Step 10

Using long needle pliers, remove the end cap from the brake cable and set aside. Using a 5 mm Allen wrench, loosen the hex bolt that clamps the brake cable and slide the cable out.

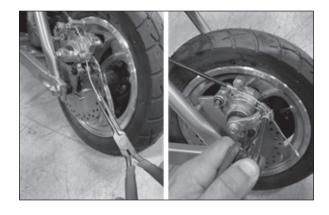

Step 11

Install the new brake lever, then reverse steps 1 through 10.

ATTENTION: Charge battery 12 hours before using.