

Required Tools: (Not included)

- A. Phillips screwdriver
- B. Small pointy object
- C. 13 mm open wrench

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove six (6) screws located on the back of the battery cover.


**Step 2**

Remove the battery cover from the opposite side. Locate and disconnect the motor from the controller.

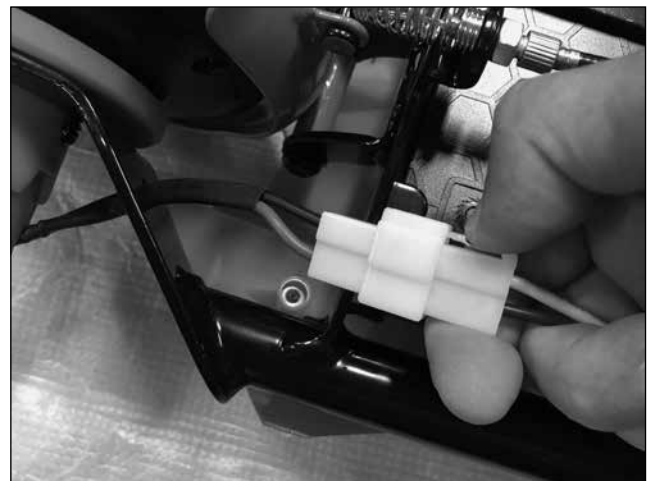

Step 3

Using a small pointy object, press the tabs from the prongs and slide them out from the connector. Pull the wires through the opening on the frame.

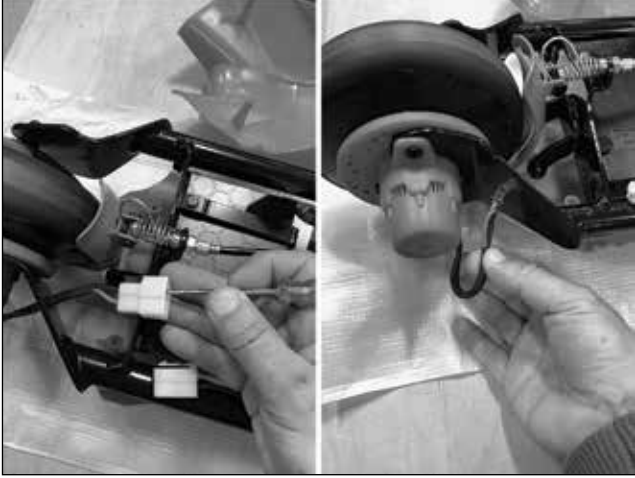

Step 4

Using a 13 mm open wrench, loosen the lock nut from the axle. Using a Phillips screwdriver, remove two (2) screws that hold the wheel to the fork. Slide the wheel down from the fork.



Step 5

To install a new front wheel motor, reverse steps 1-4.

- Put the new wheel in place, secure it with the screws, and fasten the lock nut.
- Feed the wires through the opening on the fork. Reattach the connector to the wires (black to yellow, red to blue).
- Place the battery cover back in place.
- Reattach battery cover screws.

ATTENTION: Charge battery 12 hours before using.