

Required Tools: (Not included)


- A. 2.5 mm Allen Wrench
- B. Two (2) 5 mm Allen Wrenches
- C. Phillips Screwdriver
- D. Needle Nose Pliers
- E. C Clip Removal Tool or Flathead Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Flip the unit over and using a Phillips screwdriver, remove the twenty (20) screws from the bottom of the scooter.

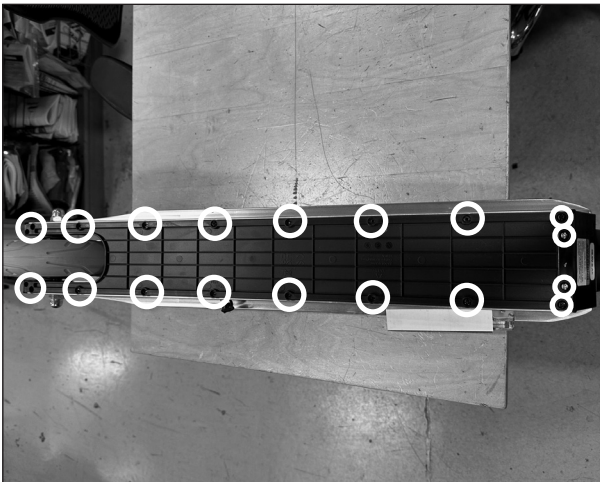

Step 2

Lift and remove the battery cover and front cover from the scooter.



Step 3

Locate and disconnect the two (2) connectors at the front of the scooter.



Step 4

Using a 5 mm Allen wrench, loosen the two (2) bolts on the collar clamp and remove the stem from the fork. Disconnect the two (2) connectors from the fork.



Step 5

Using a 2.5 mm Allen wrench, loosen and remove the two (2) screws from the folding mechanism cover. With a Phillips screwdriver, remove two (2) more screws from inside the cover and remove the cover.



Step 6

Using needle nose pliers, disconnect the spring from the locking pin inside the folding mechanism.



Step 7

Using a C clip removal tool or a flathead screwdriver, remove the C clip from the locking pin and slide out the locking pin. This will allow you to remove the downtube and fork assembly.



Step 8

Using two (2) 5 mm Allen wrenches, loosen and remove the front axle from the fork and remove the wheel.



Step 9

Reverse the steps to install the new fork and downtube.

ATTENTION: Charge battery 7 hours before using.